



Assembly instructions


Set for fast and equal application of adhesive on ceramic tiles

- ✓ adjustable table with rubber rollers - NetYou Table 600 or 800
- ✓ adjustable notched trowel device - NetYou II 600 or 800


Assembly does not require additional tools, and colorful stickers make assembly easier

Step 1

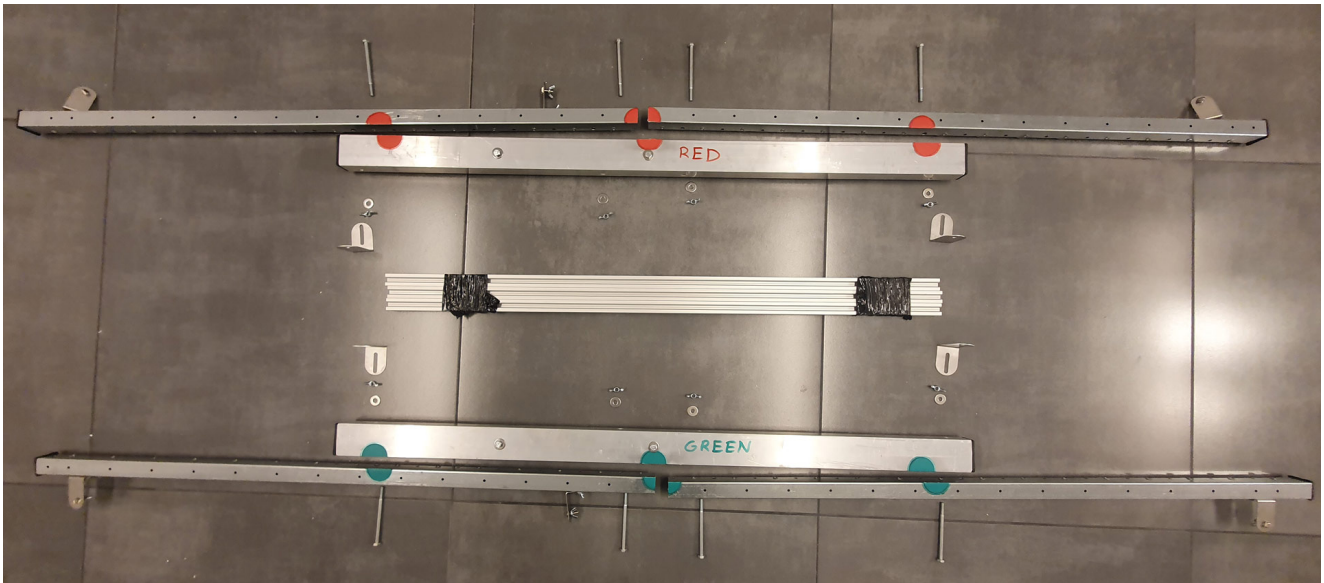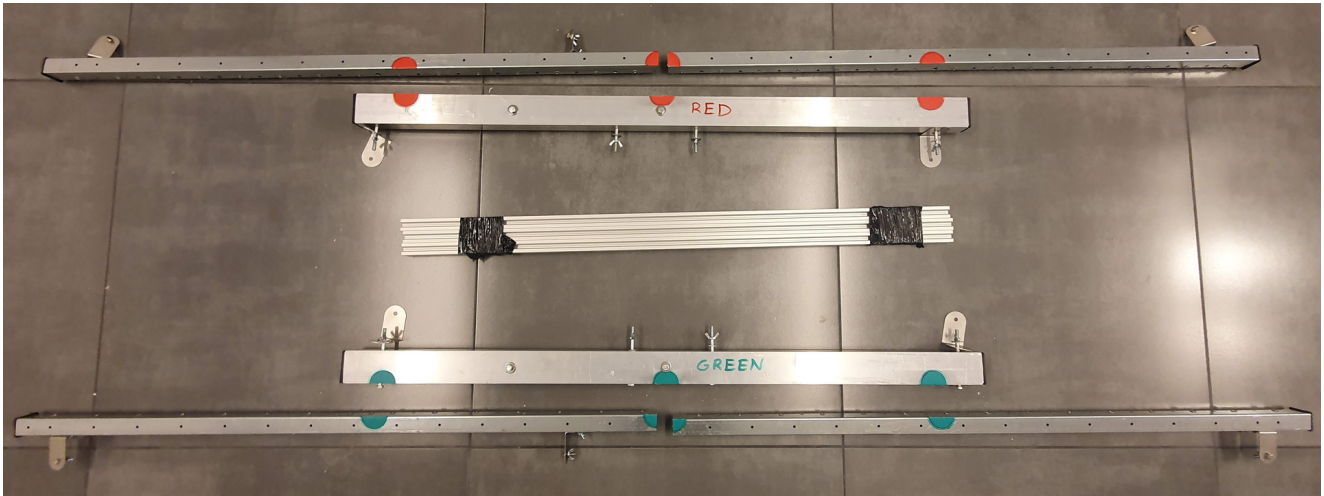

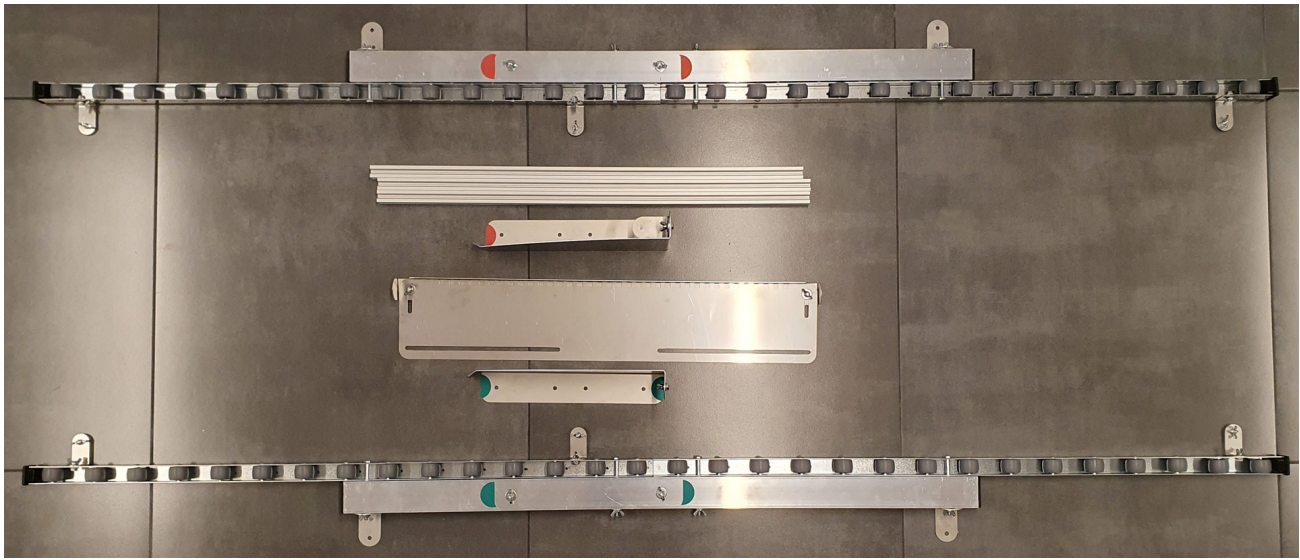


Step 2 (screw on the 3 aluminum cross rails (6 fixings in total). The screws lock when tightening and unlock when loosening. Make sure they are in the groove)

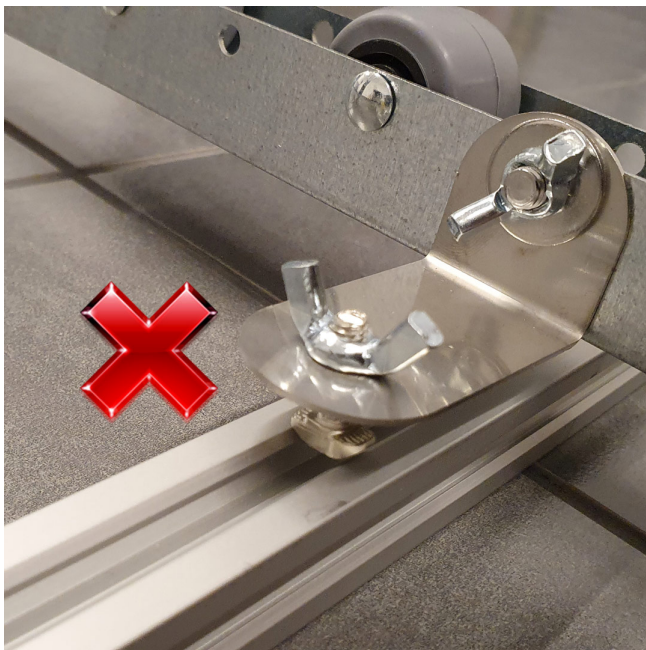








Attention! Do not tighten the nuts yet (there will still be some play required)

Step 3 (set 2 on the left + 2 on the right and screw it to the ground if necessary)

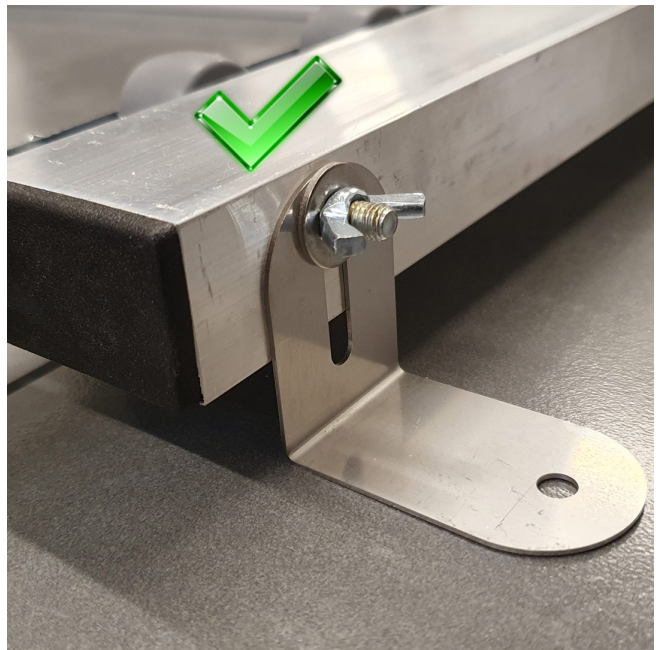


Step 4 (screw on the NetYou II device)


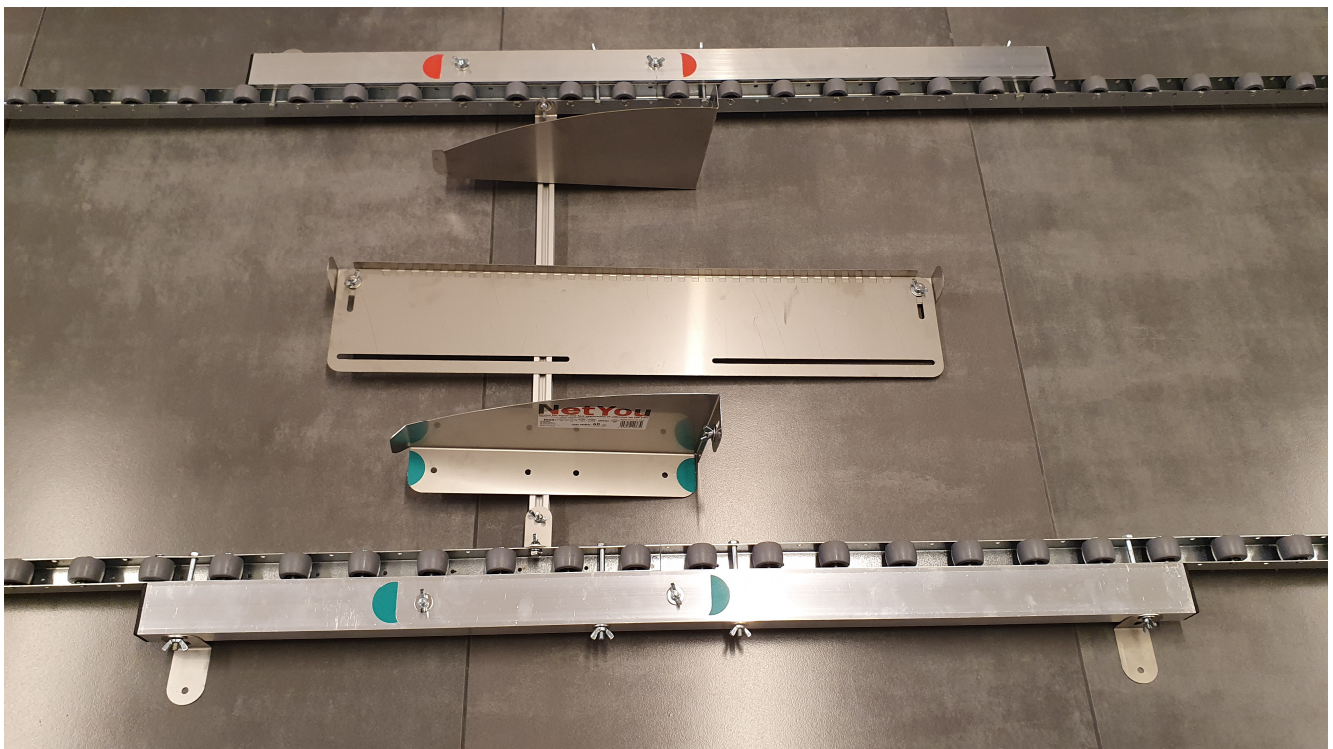


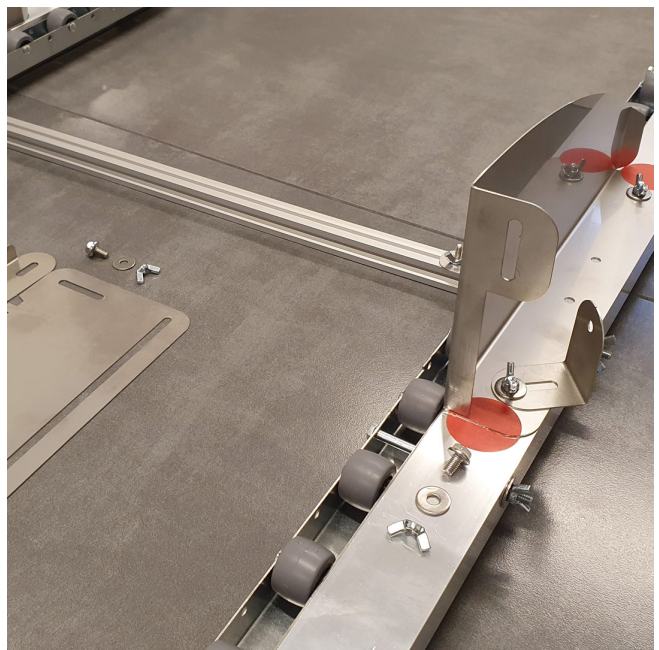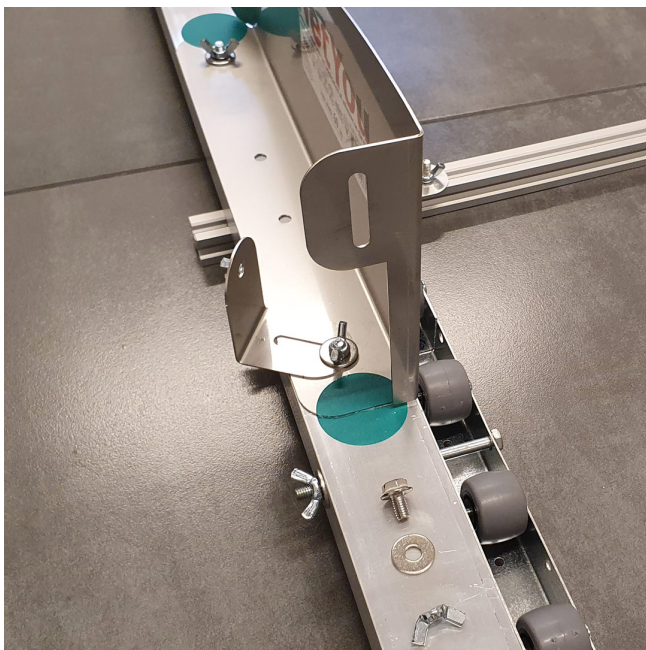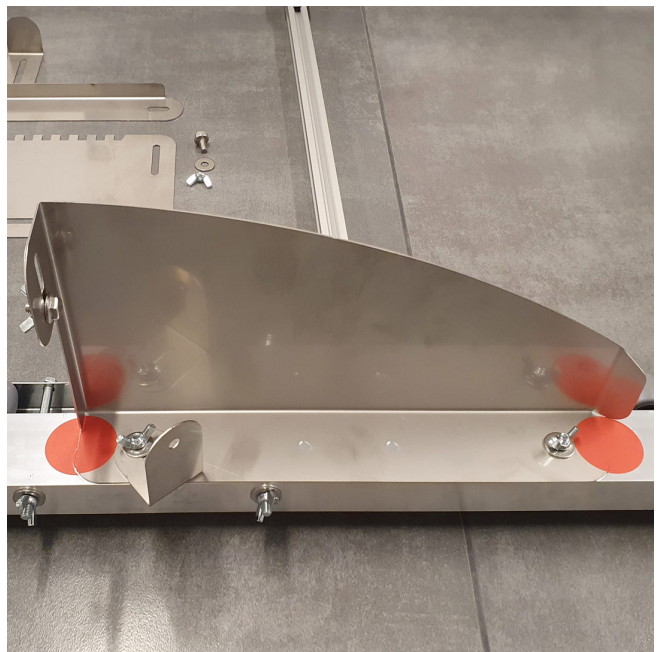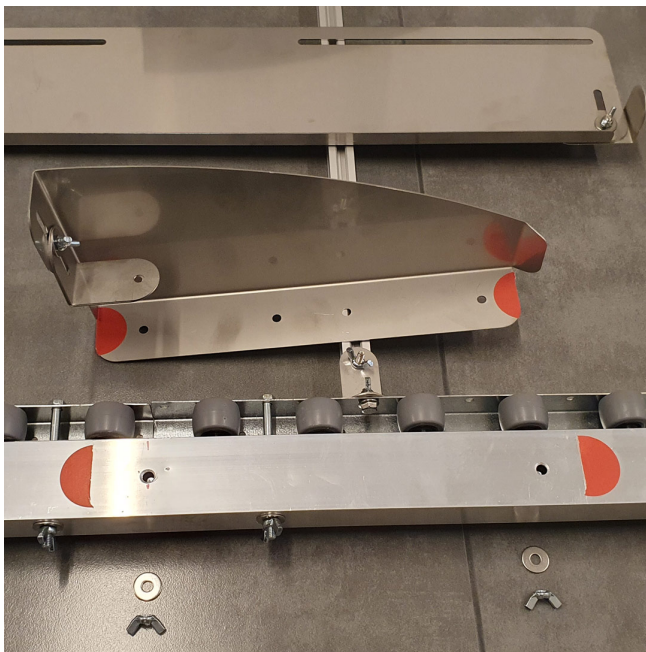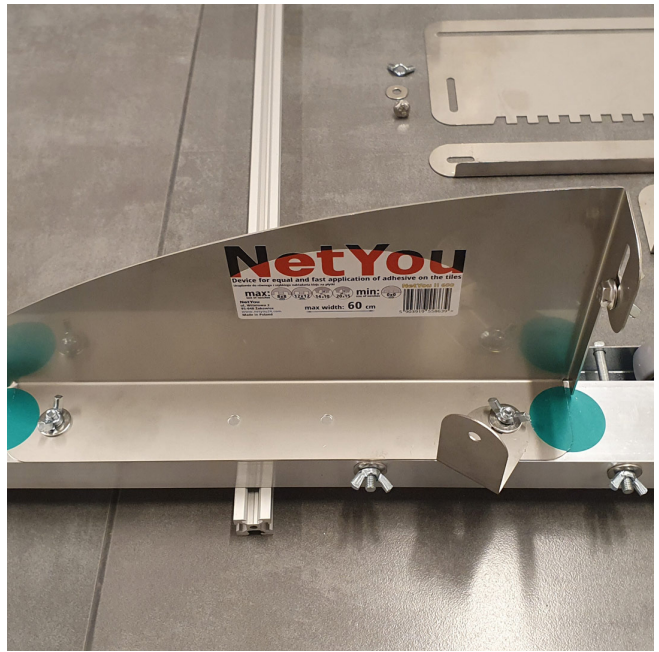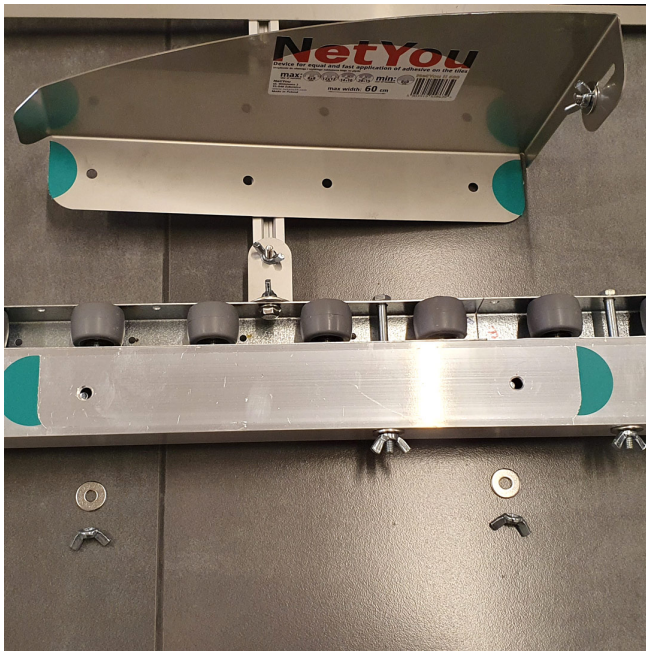


Step 5

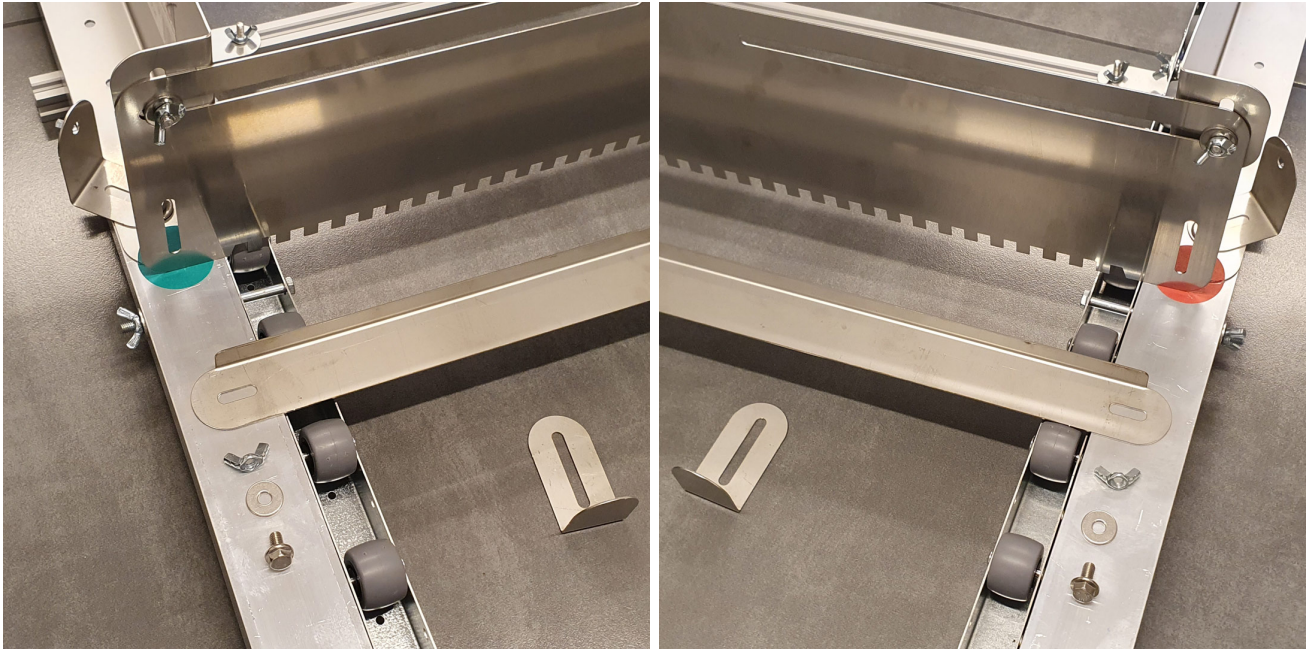



Step 6 (tighten the tooth cover)

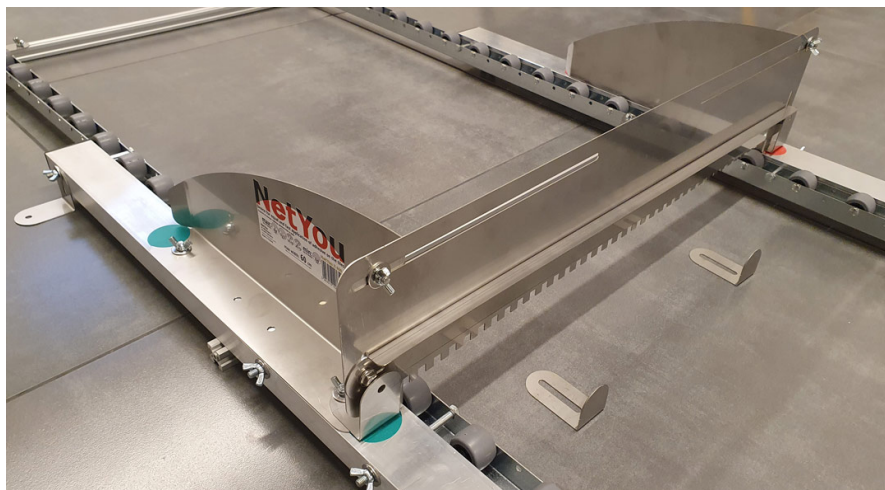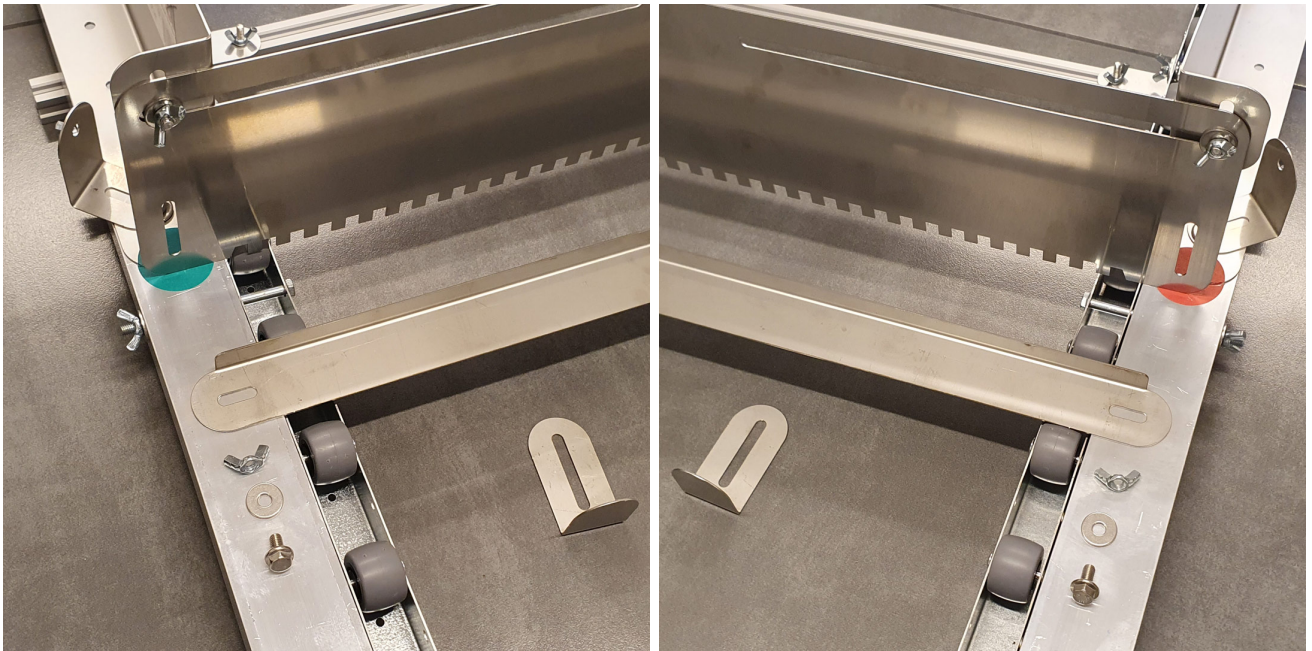


Step 7 (adjust the device to the shape of the tile and leave a little play on the side of the tile)

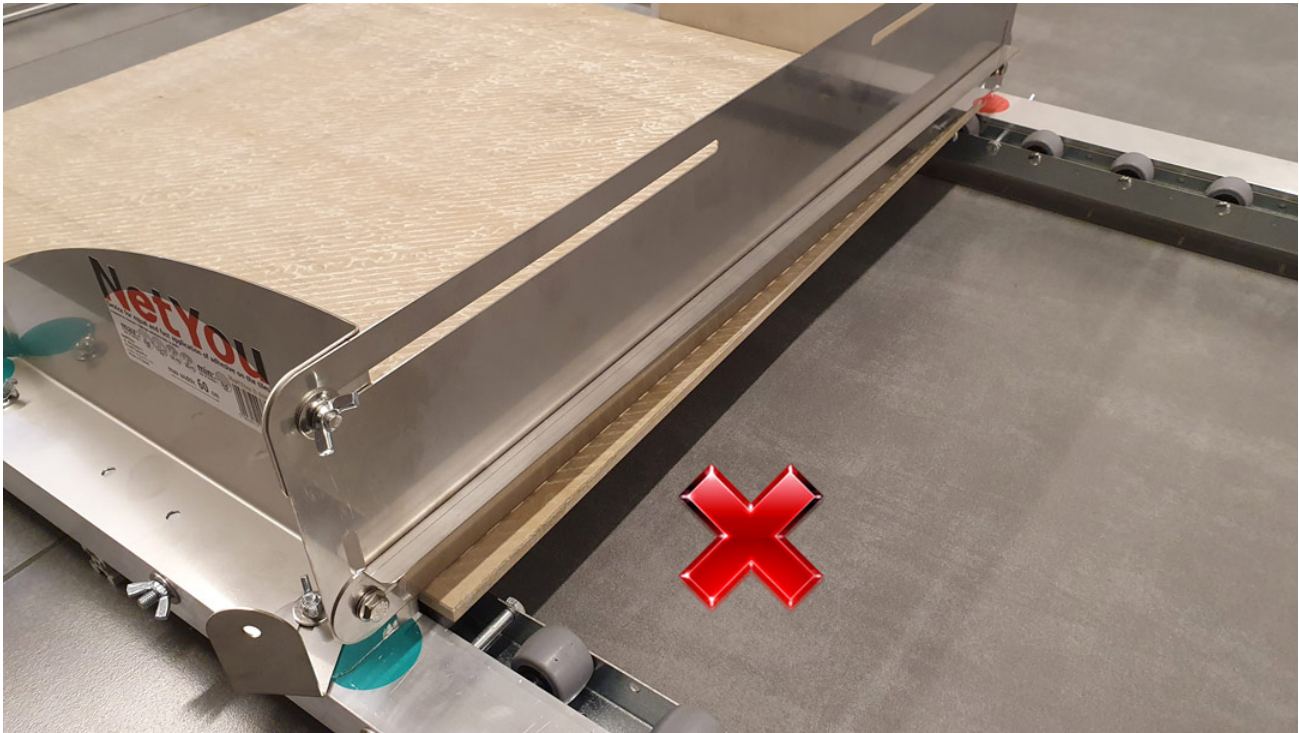

Step 8 (use two feeler gauges and set the clearance above the tile, and then check whether the entire tile moves freely and without resistance on the rubber rollers)

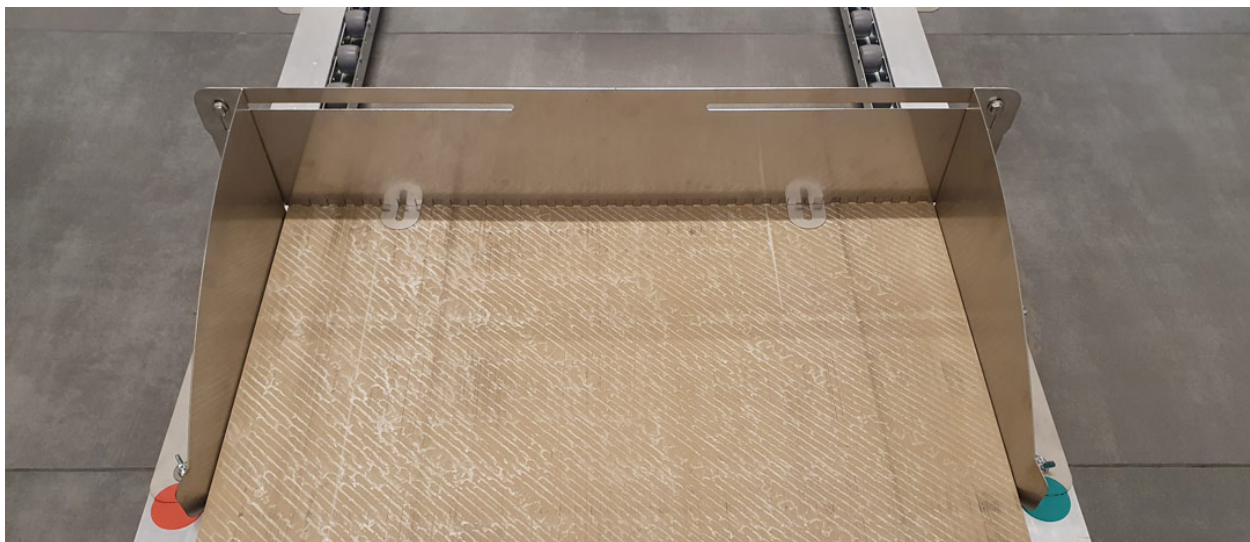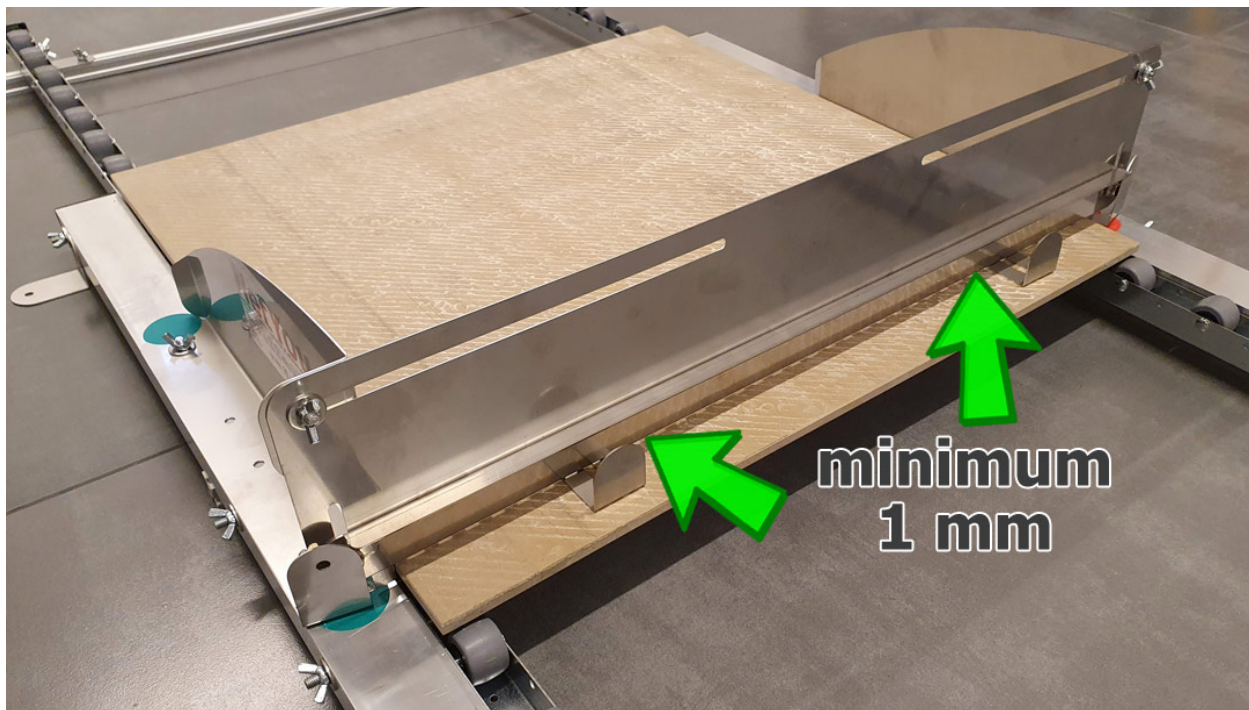

Step 9 (Lift the cover up to lubricate the plate with your teeth, not smoothly)

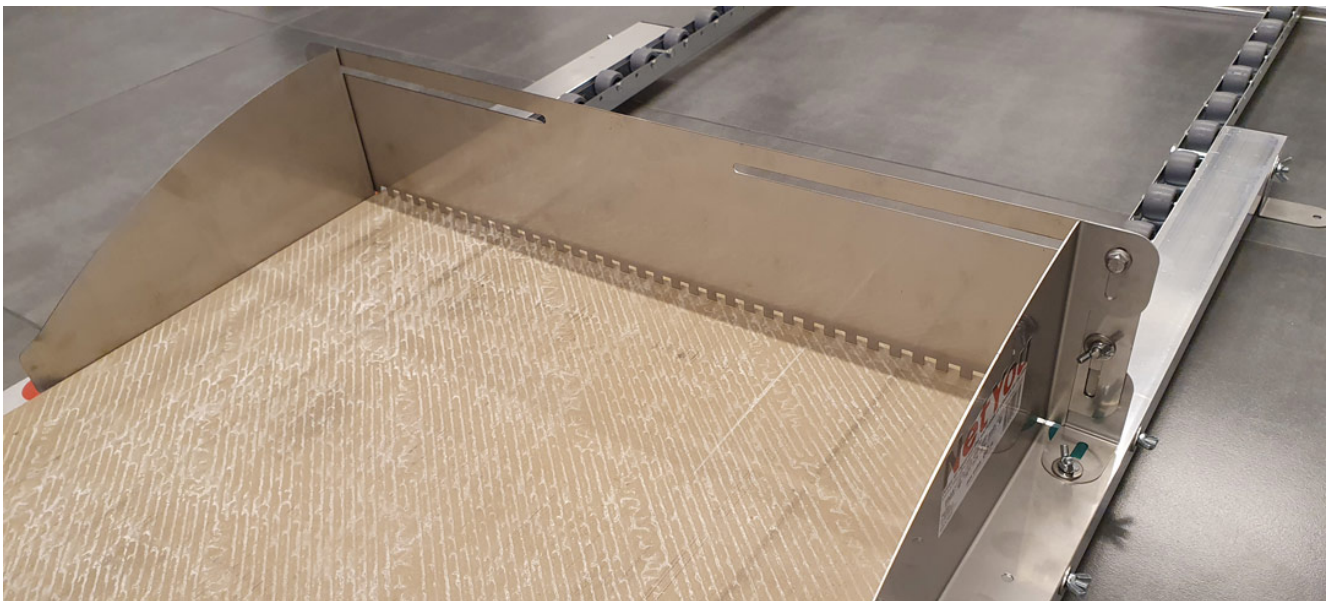

- Now tighten any screws that are still loose
- Place the tile at the beginning of the device so that the glue covers it completely
- Place the tile adhesive between the arms of the device (directly on the tile)
- While working, check the amount of glue and the tile to see if they are dirty (dusty).
- Enjoy fast work
- Before a long break in work, clean the device of excess glue (wipe wet)
- After finishing work, wash the device (preferably before the glue dries) ☺